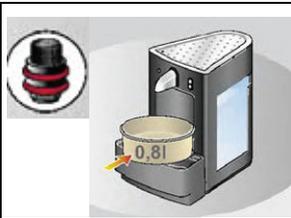
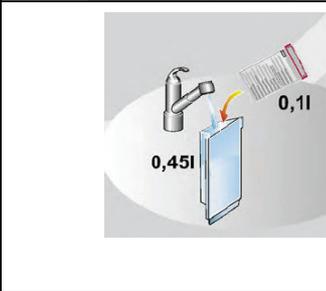
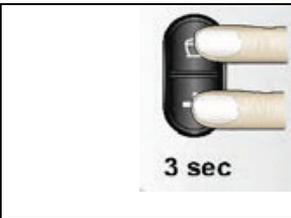


Descaling CS20

1	Machine needs to be completely cold before descaling. Unplug machine and let it cool down for about 15 minutes.	
2.	Remove milk canister from machine. Unscrew the nozzle with the red rings clockwise. Place a container underneath the milk spout. Empty Drip tray and insert back into the machine.	
3.	Fill up water tank with 1 packet of solution diluted with 0.45L of water.	
4.	Put the machine in standby mode. Machine should be on from the power point. And the on/off button should be illuminated red. The Cup and Plus button should be off.	
5.	Press and hold Cup and plus button until the buttons light up orange. Descaling solution should start pouring out from nozzle. (If the buttons are flashing orange alternately this means the machine is too hot and you need to unplug the machine and let the machine cool down.)	
6.	Let all the solution pour out from the nozzle until the machine automatically stops. Remove the water tank and drip tray, clean and rinse. Fill up the water tank with 0.45L of water. Insert water tank and drip tray back onto the machine. Press the cup button again to start the rinsing process. Water will pour out and automatically stop once complete.	
7.	Descaling complete	