


Descaling Instructions Nespresso CS220

Turn the white tap at the back of the machine to the off position(Vertical)

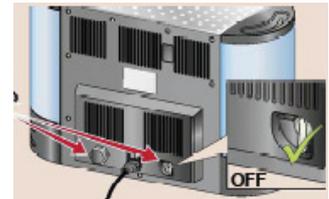

1.	Empty all drip trays and capsule containers. Put them back into place. You will need to have containers or something to catch the water under the nozzles.	
2.	Press Standby on/off button on machine. Initially it will start flashing red, wait until it stops flashing. All the cup lights should be off.	
3.	When the on/off button has stopped flashing hold down all three cup buttons until it displays “English” on the screen.	
4.	This will bring you to the menu of the machine the cup buttons on the left and right are scroll keys and the middle cup is an enter key. Press the cup button on the right 3 times and it should say “Descaling”. Then press the middle cup button to enter.	
5.	Water will start running out from the nozzle. Then it will stop and say “ Fill descaling fluid push a button”	
6.	Take off the water tanks completely off the base. Fill the left tank with 2/3 of water and put 4 sachets of solution. Fill the right tank with 1/3 of water and 2 sachets of solution. Buttons should turn white. Then press any cup button. Water should start pouring, don't press anything until it automatically stops.	
7.	Note: DO NOT stop the descaling process otherwise you will need to start again. When you reach half way it will say “Fill water push a button“. Empty drip trays and fill the water tanks to the top with cold water and then press any cup button again. This will do a rinsing cycle. Wait until it stops.	
8.	Once descaling process is complete it will say “Push any button to exit” Push any cup button and turn the machine back on. Decaling complete.	