












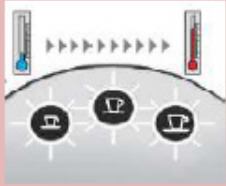


Nespresso Zenius ZN100 - Descaling

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 	<p>5</p> 	<p>6</p> 	<p>7</p> 
<p>Clockwise rotating red lights in buttons indicate that the machine needs to be descaled</p>	<p>To start the descaling process, switch the machine "OFF" * please ensure the lever is closed.</p>	<p>Fill tank with 1 litre of water and 2 sachets of Nespresso descaling liquid</p>	<p>Attach water tank to the machine</p>	<p>Place an empty container (1.5 ltr) under the coffee outlet.</p>	<p>Press and hold the Ristretto button and switch the machine "ON". Ristretto button will light up red</p>	<p>Press the Ristretto button to start descaling process. Descaling liquid will flow from the coffee and hot water nozzle</p>
<p>8</p> 	<p>9</p> 	<p>10</p> 	<p>11</p> 	<p>12</p> 	<p>13</p> 	<p>14</p> 
<p>When descaling is finished, the Lungo button will light up red</p>	<p>Empty the water receptacle and put it back under the coffee outlet</p>	<p>Empty the water tank and rinse it with clean water</p>	<p>Fill the tank with clean water and attach it to the machine</p>	<p>Press Lungo button to start rinsing process</p>	<p>When rinsing has finished, the flow will stop and Lungo button will remain lit up red</p>	<p>The machine can now be switched "ON". Lights in Ristretto, Espresso and Lungo buttons will flash white while the machine is heating up. It is then ready to use</p>