




HOW TO DISTINGUISH BETWEEN MILK TANK, WATER TANK & CLEANING TANK

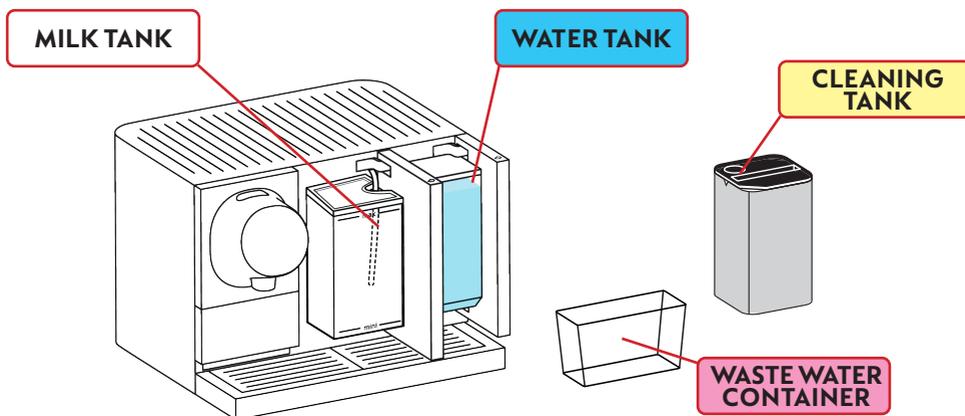

MILK TANK

- White lid
- Transparent tank

TIPS

Keep milk tank
in machine
fridge at all time
outside cleaning
cycles.



CLEANING TANK

- Black lid
- Black & transparent tank
- Cleaning tablet insertion slot in top left corner of the lid





DAILY MILK MACHINE CLEANING PROCEDURE AND TIPS

Following the below tips will take approximately 35 minutes cleaning ~20 minutes + machine cool down ~15 minutes

Ensure milk module cleaning is performed every day.

Cleaning alert will appear on welcome screen 24h after the first milk recipe preparation following previous cleaning cycle.

TIPS




Perform cleaning every evening.


Milk recipes will only be available ~15 minutes after the cleaning process.

TIP 1 How to speed up the daily cleaning process

1. Remove milk tank from fridge

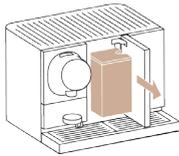

2. Insert tablet in cleaning tank and cleaning tank in the fridge

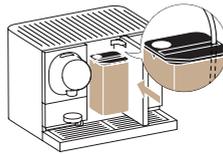

3. Launch cleaning procedure





with the red icon on welcome screen (or by selecting in maintenance menu)

Note: The machine will request 2 consecutive cleaning cycles if it is not performed within the 48h following the appearance of the red cleaning icon.

TIP 2 Confirm all steps to validate the process

Once the machine has ended the cleaning cycle (~20 minutes) perform the actions displayed on screen and confirm all steps

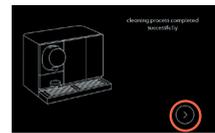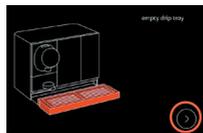

TIP 3 How to speed up the cooling down process in order to make milk recipes

Once the cleaning procedure is complete, you can reduce the machines' cooling down process to ~15 minutes by:



• Refilling the milk tank up to maximum level (3 litres).



• Using milk pre-cooled to 5°C



• Closing the fridge door



DESCALING PROCEDURE AND TIPS

Your machine calculates the duration between two descaling requests based on:

- the use of a filter
- the water hardness level
- the quantity of beverages prepared

TIPS

In case both «clean» and «descale» symbols appear at the same time, proceed to cleaning procedure first.






If the machine is equipped with a water filter, always remove it before descaling.



WHAT SHOULD YOU DO WHEN THE RED DESCALING ICON APPEARS?

Once the red «descale» icon is displayed, you must perform the required descaling procedure (i.e coffee or milk module) within 30 days.

THE FIRST 15 DAYS (from when descaling message appears)

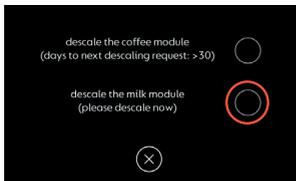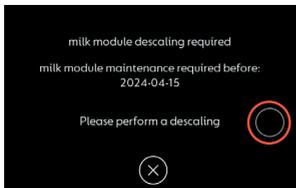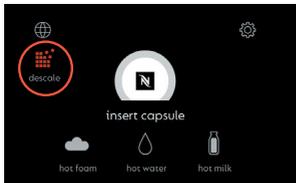

Number of remaining days until next process required, purely informative.

DAYS 15 TO 0 (urgent - blinking)



After 30 days, if no action taken, beverages / milk recipes will be disabled.




DESCALING PROCEDURE AND TIPS

2 PROCESSES: COFFEE MODULE & MILK MODULE


DESCALING: COFFEE ~15 minutes

Materials needed:

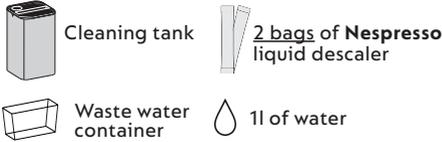

DESCALING: MILK ~60 minutes

Materials needed:

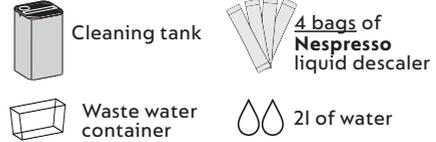

Note: You will be required to come back to the machine and perform some actions several times during the descaling process.

1. Launch the descaling procedure by pressing and follow instructions on screen

2. Add descaling solution



2. Add descaling solution



3. Fill the water tank to the mark



3. Fill the water tank to the mark



4. Replace the water tank and launch the process. Follow instructions on screen and perform all steps to validate the process.

5. After COFFEE DESCALING process, all recipes are immediately available. After MILK DESCALING process, milk recipes are not available immediately. To reduce the waiting time:



• Refill the milk tank up to **maximum level** (3 litres).



• Use milk **pre-cooled** to 5°C



• **Close** the fridge door



FILTER CHANGE & WATER HARDNESS SETUP PROCEDURE AND TIPS

Your machine calculates the duration prior to changing the filter based on:

- the water hardness level
- the quantity of beverages prepared

TIPS



Place the waste water container below the outlet prior to launching the filter change procedure. The machine will automatically perform a rinsing cycle of approximately 0.5 litres.

WATER HARDNESS SETUP

Important note:


You can verify at all times that the appropriate water hardness level is set on the machine.

1. Go into «setup menu»



Enter «set water hardness» and follow the instructions on screen.

2. Test your water hardness and select the result

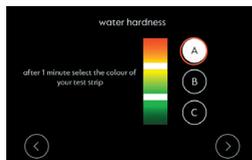


FILTER CHANGE


1. Tap on the red filter symbol and follow the instructions on screen



2. Complete all steps to validate the procedure

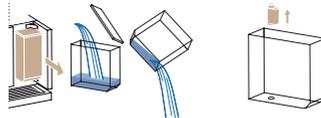

Remove the old filter from the water tank.

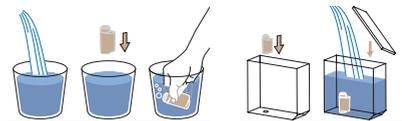

Fill a container with fresh drinking water. Immerse the new water filter and squeeze it several times until all air bubbles have been removed. Insert new filter into water tank.