



my
machine



Breville

NESPRESSO®

Nespresso, an exclusive system creating the perfect Espresso, time after time.

All machines are equipped with a unique extraction system that guarantees up to 19 Bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each Grand Cru can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.

CITIZ&MILK BEC600M_09.2013

CONTENT



These instructions are part of the appliance. Read all instructions and all safety instructions before operating the appliance.

SAFETY PRECAUTIONS	03	CONTACT THE <i>NESPRESSO</i> CLUB	17
OVERVIEW	05	DISPOSAL AND ENVIRONMENTAL PROTECTION	17
SPECIFICATIONS	05	ECOLABORATION: ECOLABORATION.COM	17
ENERGY SAVING MODE	06	LIMITED WARRANTY	18
FIRST USE OR AFTER LONG PERIOD OF NON-USE	07		
COFFEE PREPARATION	08		
PROGRAMMING THE WATER VOLUME	09		
MILK FROTH PREPARATION	10		
EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION, OR BEFORE A REPAIR	11		
RESET TO FACTORY SETTINGS	12		
DESCALING	13		
CLEANING	15		
TROUBLESHOOTING	16		



⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

ℹ INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.

- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This is a household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received

instruction to use the device safely and understand the dangers.

- Children shall not use the device as a toy.
- The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

The appliance must only be connected after installation.

- Do not pull the cord over sharp edges,

clamp it or allow it to hang down.

- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the *Nespresso* Club or to a *Nespresso* authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long

period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.

- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug

from the power socket. Contact the *Nespresso* Club or *Nespresso* authorized representative for examination, repair or adjustment.

- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso* Club or *Nespresso* authorized representative.
- Always fill the water tank with cold, fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time

(holidays, etc.).

- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso* authorized representative. *Nespresso* quality is only guaranteed when *Nespresso* capsules are used in *Nespresso* appliances.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change

instructions without prior notice.


⚠ CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the *Nespresso* descaling kit.

SAVE THESE INSTRUCTIONS
Pass them on to any subsequent user. This instruction manual is also available as a PDF at [nespresso.com](https://www.nespresso.com)

OVERVIEW

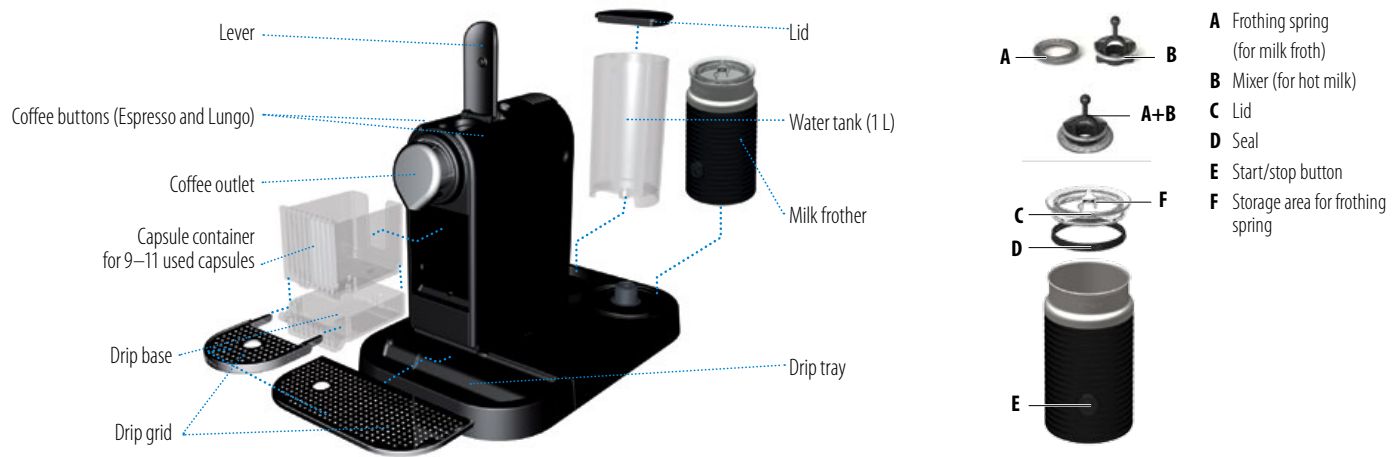

PACKAGING CONTENT



Coffee Machine



Nespresso Grands Crus capsule tasting gift



«Welcome to Nespresso» Folder



User Manual


SPECIFICATIONS

Breville BEC600M			
	23.7 cm	27.7 cm	37.2 cm
	220-240 V, 50-60 Hz, 1710 W	P	Max. 19 Bar
	4.6 Kg		1 L




ENERGY SAVING MODE

This machine is equipped with an energy saving feature. The machine will automatically enter power off mode after 9 minutes.

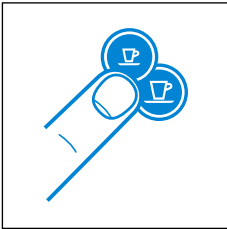


To turn the machine on either press the Espresso or Lungo button.

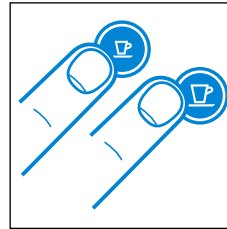

To turn the machine off before automatic Power Off mode, press both the Espresso and Lungo button simultaneously.


To change this setting:

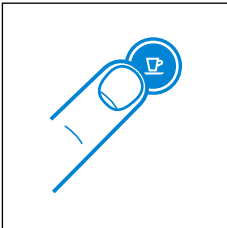


1. With machine being turned off, press and hold the Espresso button for 3 seconds.



2. The Espresso button will blink to indicate the current setting.

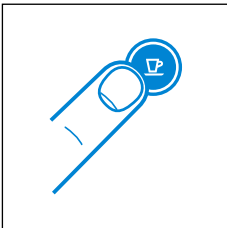


3. To change this setting press the Espresso button:
One time for power off mode after 9 minutes.
One more time for power off mode after 30 minutes.

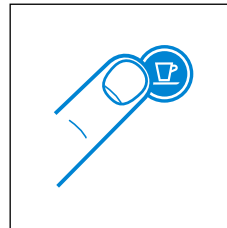


4. To exit the energy saving mode press the Lungo button for 3 seconds.

FIRST USE OR AFTER A LONG PERIOD OF NON-USE

⚠ CAUTION: first read the safety precautions to avoid risks of fatal electrical shocks and fire.

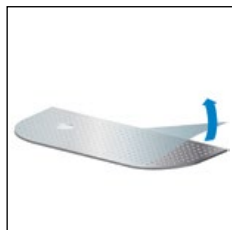


1. Remove the plastic film from the drip grid.

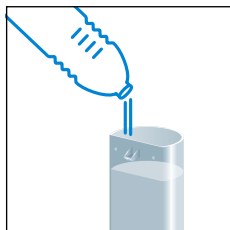


2. Rinse the water tank before filling with potable water.




3. Place a container (min. 1 L) under coffee outlet.

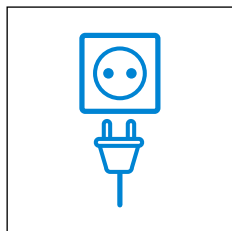


4. Plug into mains.

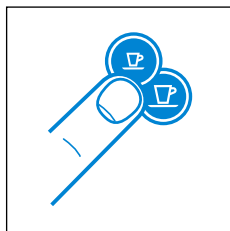


5. Press the Espresso or Lungo button to activate the machine.

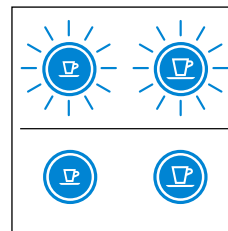

Blinking Lights: heating up (25 sec)

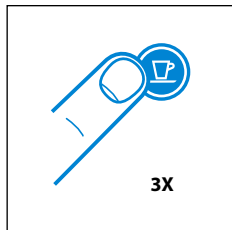


6. Press the Lungo button to rinse the machine. Repeat 3 times.

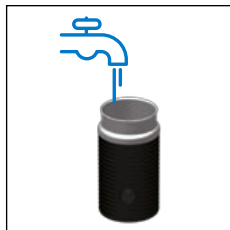


7. Rinse Aeroccino.


Steady Lights: ready

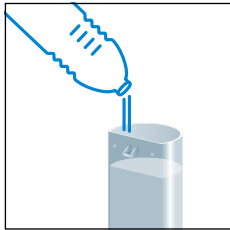

1. Rinse then fill the water tank with potable water.

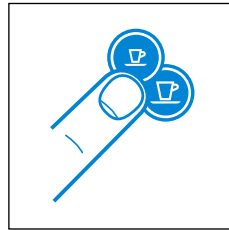

2. Press the Espresso or Lungo button to activate the machine.

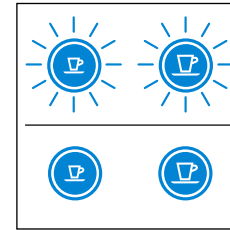

Blinking Lights: heating up (25 sec)

Steady Lights: ready




3. Lift the lever completely and insert a *Nespresso* capsule.

⚠ CAUTION: never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance.

ℹ NOTE: during heat up, you can press either coffee button while blinking. The coffee will then flow automatically when the machine is ready.



4. Close the lever and place a cup under the coffee outlet.

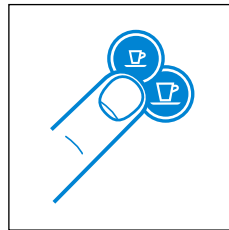


5. Press the Espresso (40 ml) or the Lungo (110 ml) button to start. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.




6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container.

PROGRAMMING THE WATER VOLUME

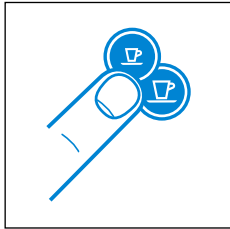


1. Turn the machine on and wait for it to be in ready mode (steady lights).

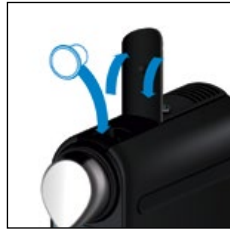

2. Fill the water tank with potable water and insert a *Nespresso* capsule.



3. Place a cup under the coffee outlet.

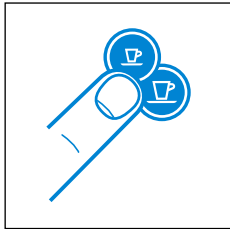

4. Press and hold the Espresso or Lungo button.


5. Release button once the desired volume is served.

6. Water volume level is now stored.


⚠ WARNING: only use the Aeroccino with the connector provided. Risk of electrical shock and fire! Make sure the under side of the milk frother is dry.



1. Attach the relevant whisk.

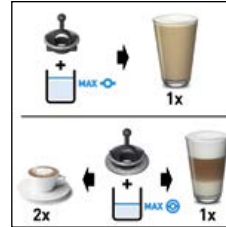

2. Fill milk frother up to one of the two «max» level.

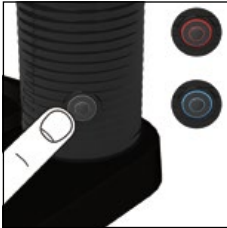

3. Place the lid on the Aeroccino. For a hot preparation, briefly press button to start. Button lights up Red. Takes approx. 70-80 sec. For cold milk froth, keep button pressed for approx. 2 seconds. Button lights up Blue. Takes approx. 60 sec.




4. Clean after each preparation. Only use non abrasive cloth, never use a brush. Jug is water proof. Do not put in dishwasher.

TIP: for optimal milk froth, use whole or semi skimmed milk at refrigerated temperature (about 4-6° C).

EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION, OR BEFORE A REPAIR


i NOTE: your machine will be blocked for 10 minutes after emptying mode.

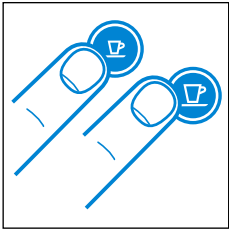


1. To enter the emptying mode, press both the Espresso and Lungo button to turn the machine off.



2. Remove the water tank and open the lever.

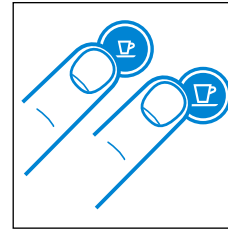

3. Press both the Espresso and Lungo button for 3 seconds.

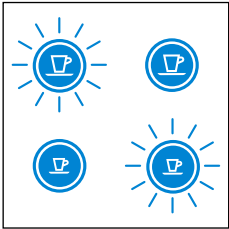

Both LEDs blink alternatively.




4. Close the lever.


5. Machine switches off automatically.

6. Empty and clean the used capsule container and drip tray.


EN RESET TO FACTORY SETTINGS

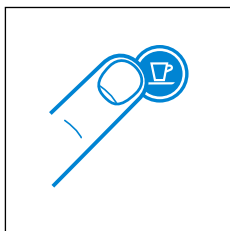

1. With machine being turned off, press and hold down the Lungo button for 5 seconds.

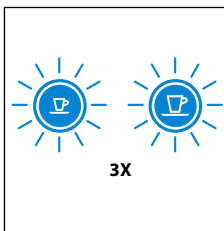

2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

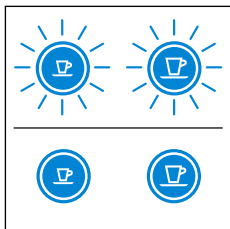

3. LEDs will then continue to blink normally, as heating up, until ready.

Steady lights: machine ready

Factory settings

Espresso Cup: 40 ml

Lungo Cup: 110 ml

Power Off mode: 9 min


NOTE: duration approximately 15 minutes.



1. Remove the capsule and close the lever.




2. Empty the drip tray and used capsule container.

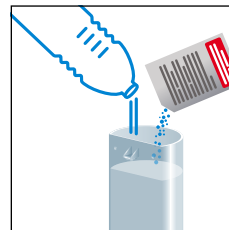


3. Fill the water tank with 0.5 L of potable water and add 1 *Nespresso* descaling liquid.




4. Place a container (min. volume 1 L) under the coffee outlet.

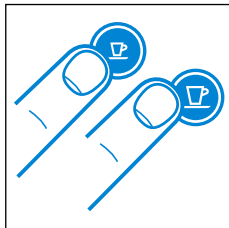


5. To enter the descaling mode, while the machine is turned on, press both the Espresso and Lungo button for 3 seconds.

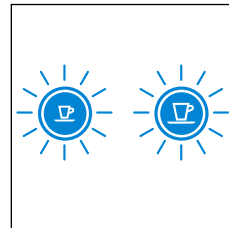


Both LEDs blink.

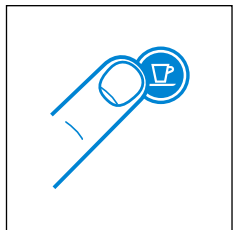

6. Press the Lungo button and wait until the water tank is empty.

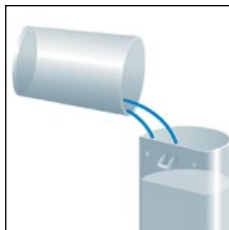


7. Refill the water tank with the used descaling solution collected in the container and repeat step 4 and 6.

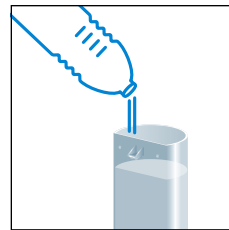

8. Empty and rinse the water tank. Fill with potable water.

EN DESCALING

9. When ready, repeat step 4 and 6 to now rinse the machine.

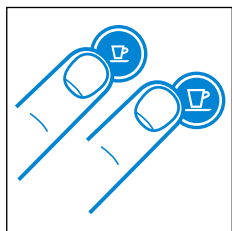

10. To exit the descaling mode, press both the Espresso and Lungo button for 3 seconds.

11. The machine is now ready for use.

⚠ CAUTION: the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the *Nespresso* descaling kit available at the *Nespresso Club* to avoid damage to your machine. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your *Nespresso Club*.


Water hardness:		Descalce after:		fH	French grade
fH	dH	CaCO ₃	Cups (40 ml)	dH	German grade
36	20	360 mg/l	300	CaCO ₃	Calcium carbonate
18	10	180 mg/l	600		
0	0	0 mg/l	1200		



⚠ WARNING

Risk of fatal electrical shock and fire.

Never immerse the appliance or part of it in water.
Be sure to unplug the machine before cleaning.
Do not use any strong cleaning agent or solvent cleaner.
Do not use sharp objects, brushes or sharp abrasives.
Do not place in a dishwasher.

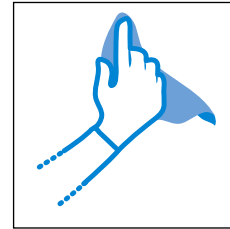

Clean the coffee outlet regularly with a soft damp cloth.



Maintenance unit can be removed in separate pieces for easy cleaning.

No light indicator.	→ Check the mains, plug, voltage, and fuse. In case of problems, call the <i>Nespresso</i> Club.
No coffee, no water.	→ First use: fill water tank with warm water (max. 55° C) and run through machine according to instructions on page 10. → Water tank is empty. Fill water tank. → Descal if necessary; see Descaling section.
Coffee comes out very slowly.	→ Flow speed depends on the coffee variety. → Descal if necessary; see Descaling section.
Coffee is not hot enough.	→ Preheat cup. → Descal if necessary.
Capsule area is leaking (water in capsule container).	→ Position capsule correctly. If leakages occur, call the <i>Nespresso</i> Club.
Irregular blinking.	→ Send appliance to repair or call the <i>Nespresso</i> Club.
No coffee, just water runs out (despite inserted capsule).	→ In case of problems, call the <i>Nespresso</i> Club.
Aeroccino does not start.	→ Be sure to position the jug correctly on a clean base. Be sure to attach the whisk to the jug correctly
Quality of milk froth not up to standard.	→ Be sure to use whole or semi-skimmed milk at refrigerated temperature (about 4-6° C). Be sure to use the appropriate whisk and the jug is clean.
Red Button blinking.	→ a) The appliance is too hot. Rinse it under cool water b) Whisk is missing c) Not enough milk. Fill milk frother up to one of the two «max» level.
Milk Overflows.	→ Be sure to use the appropriate whisk and check the corresponding indicator level.

CONTACT THE *NESPRESSO* CLUB


As we may not have foreseen all uses of your appliance, should you need any additional information, in case of problems or simply to seek advice, call the *Nespresso* Club or your *Nespresso* authorized representative. Contact details for your nearest *Nespresso* Club or your *Nespresso* authorized representative can be found in the «Welcome to *Nespresso*» folder in your machine box or at nespresso.com

DISPOSAL AND ENVIRONMENTAL PROTECTION

This appliance complies with the EU Directive 2002/96/EC. Packaging materials and appliance contain recyclable materials. Your appliance contains valuable materials that can be recovered or can be recyclable. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

ECOLABORATION: ECOLABORATION.COM

 We have committed to buy coffee of the very highest quality grown in a way that is respectful of the environment and farming communities. Since 2003 we have been working together with the Rainforest Alliance developing our *Nespresso* AAA Sustainable Quality™ Coffee Program.

 We chose aluminium as the material for our capsules because it protects the coffee and aromas of the *Nespresso* Grand Cru. Aluminium is also infinitely recyclable, without losing any of its qualities.

 *Nespresso* is committed to designing and making appliances that are innovative, high-performing and user friendly. Now we are engineering environmental benefits into the design of our new and future machine ranges.

LIMITED WARRANTY

Breville guarantees this product against defects in materials and workmanship for two years domestic use (or 3 months commercial use) from the date of purchase. During this period, Breville will either repair or replace, at its discretion, any defective product at no charge to the consumer. In the event of a product or accessory being repaired or replaced during the guarantee period, the guarantee on the repaired product will expire two years from the purchase date of the original product, not two years from the date of repair. This guarantee excludes liability for consequential loss or any other loss or damage caused to property or person arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, being tampered with by unauthorised persons, improper maintenance, consumable items or normal wear and tear and does not cover the cost of claiming under the warranty. Except to the extent applicable by law, the terms of this warranty do not exclude, restrict or modify, and are in addition to, the mandatory statutory rights applicable to the sale of the product to you. Only the use of *Nespresso* capsules will guarantee the proper functioning and lifetime of your *Nespresso* machine. Any defect resulting from the usage of non-genuine *Nespresso* capsules will not be covered by this warranty.

How to Claim Under the Breville Warranty

Nespresso is handling product enquiries and product servicing on Breville's behalf. If you believe your product is defective, contact the *Nespresso* customer service team directly for instructions on where to send or bring it for repair by a Breville authorised service agent. Contact *Nespresso* **Australia**: 1800 623 033 or **New Zealand**: 0800 234 579 auclub@nespresso.com.

This product is imported and distributed by Breville and this warranty is provided by Breville. To the extent permitted by law, *Nespresso* has no liability for the product and all guarantees, warranties and conditions by *Nespresso* are excluded.

Breville





BREVILLE BEC600M
BY NESPRESSO