

CLEANING OF AUTOCAPPUCCINATORE AND ACCESSORIES

You must clean the Autocappuccinatore everyday (every 8 hours). Use supplied brush for cleaning the plastic tube.



Optional In-Tank Water Filter (if fitted to a Gemini CS220/CS223 machine)

If you are using optional in-tank filters on your Gemini CS220/CS223 machine, and you are restarting the machine after a period of business shutdown, you must replace existing in-tank filters with new ones and ensure you dispense at least 1 litre of water from each coffee head once the filter is replaced.

Note: Gemini CS220/CS223 machines consist of 2 water tanks, and therefore require 2 optional in-tank filters (one in each tank). In-tank water filters for Gemini CS220/CS223 machines are not included with new machine and not a part stocked/supplied by **Nespresso Professional**.



In tank filters for CS220/CS223