



**NESPRESSO®**

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



*CREATISTA UNO*



Duration: 15 minutes

#### STEP 1



When the descaling LED illuminates, it is time to descale.

#### STEP 2



Eject the capsule. Close the lever.

#### STEP 3



Empty the capsule bucket and drip tray and then reinsert.

#### STEP 4



Fill the water tank with fresh water up to the DESCALE line on the tank.

#### STEP 5



Add 1 packet of *Nespresso* descaling solution to the water in the tank then place tank on the machine.

#### STEP 6



Place a receptacle underneath the coffee outlet and steam wand.

#### STEP 7



Power the machine **OFF** by pressing the Ristretto and Steam buttons simultaneously until all lights go off.

#### STEP 8



Press and hold the Ristretto and Steam buttons simultaneously until both lights illuminate steady white, along with froth indicator lights (*approx. 5 secs*).

#### STEP 9



Press and release the Ristretto or Steam button and descaling solution will begin to dispense from the coffee outlet in short intervals followed by short intervals from the steam wand. The two buttons blink alternately.



## STEP 10



When the two lights become steady, discard the descaling solution and replace the receptacle back under the outlets.

## STEP 11



Rinse and wash the water tank thoroughly and refill the tank to MAX line with fresh water before placing back onto the machine.

## STEP 12




Press and release the Ristretto or Steam button and the rinsing water will dispense from the coffee outlet in short intervals followed by short intervals from the steam wand. The two buttons blink alternately.

## STEP 13



The machine will stop when the tank is about halfway empty and the two buttons will become steady. Add about two more inches of water to the tank and press one of the buttons again and rinsing will continue.

## STEP 14

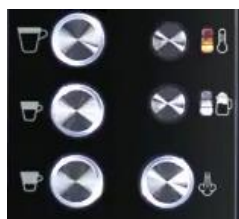

Once rinsing is complete the two buttons will blink 3 times and then all the beverage functions will illuminate steady.

## STEP 15



Discard the rinsing water.

## STEP 16



Empty and rinse the capsule bucket and drip tray, then reinsert.

## STEP 17



Refill the water tank and place it on the machine. Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes before using.