



NESPRESSO®

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.




CREATISTA PRO




Duration: 15 minutes

STEP 1

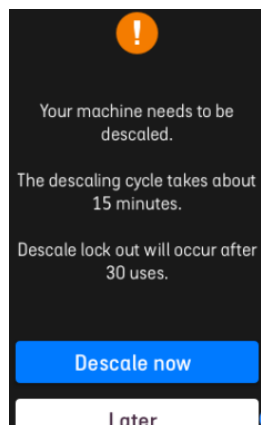

The display will alert the user when it's time to descale. A countdown of 30 uses will begin if bypassed. Select DESCALE NOW.

STEP 2

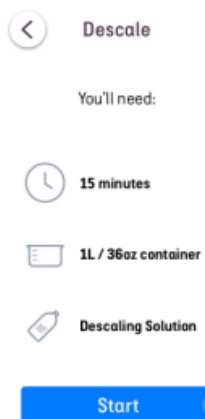

Duration will be 15 mins. Retrieve a 1L container and 1 packet of Nespresso descaling solution.

STEP 3



Lift the lever to eject any used capsules. Close the lever.

STEP 4



Empty capsule container and drip tray and return to machine.

STEP 5



Fill water tank to the descale symbol.

STEP 6



Add 1 packet of descaling solution.



STEP 7

< Replace

Reattach the water tank, drip tray and capsule container to your machine.




Place tank back on machine.

STEP 8

< Place

Place a 1L / 36oz container under the spout and steam wand.

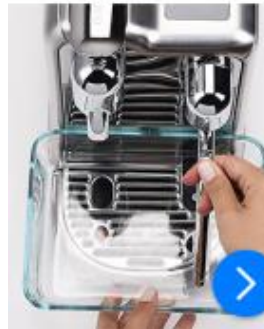


Place a large container under the coffee outlet and steam wand.

STEP 9

< Descal

Tap Start to begin the descaling cycle.

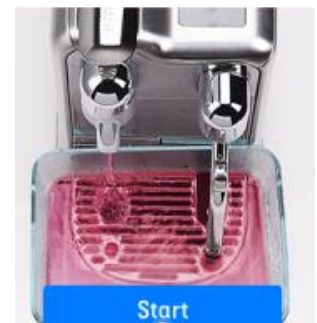

Press START and the descaling solution will dispense from the coffee outlet and steam wand in intervals.

STEP 10

< Descal

Tap Start to begin the descaling cycle.




To stop at any time press PAUSE.

STEP 11

< Empty

Remove and discard the contents of the container and drip tray.

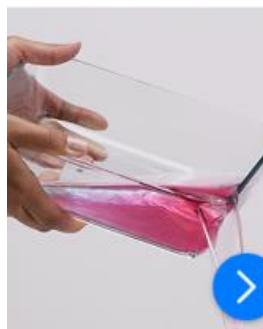


Discard the descaling solution from the container and empty the drip tray and re-insert.

STEP 12

< Empty

Discard any remaining liquid in the water tank and rinse to clean.

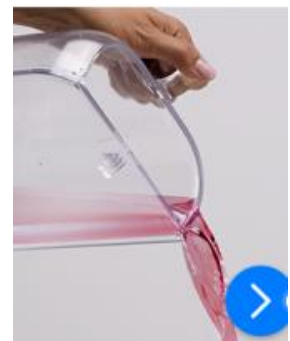

Rinse out the water tank and wash it thoroughly with mild soap and water.



STEP 13

< Fill

Now, fill the water tank to the MAX level with fresh potable water and reattach it to your machine.




Fill the water tank to the MAX line with fresh water and place on machine.

STEP 14

< Lever

Open and close the lever.

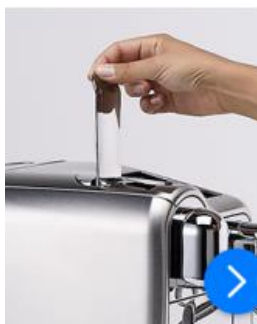


Open and close the lever.

STEP 15

< Replace

Reinsert the drip tray and replace the 1L / 36oz container under the coffee spout and steam wand.

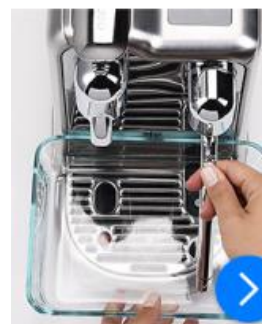


Replace the container back under the coffee outlet and steam wand.

STEP 16

< First Rinse

Tap Start to begin the first rinse cycle.

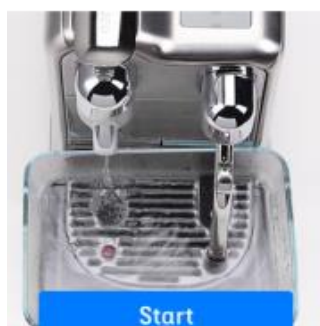

Tap START to begin the first rinse cycle.

STEP 17

< First Rinse

Tap Start to begin the first rinse cycle.




To stop at any time press PAUSE.

STEP 18

Empty

Remove and discard the contents of the container and the drip tray. Then, replace it on the machine.

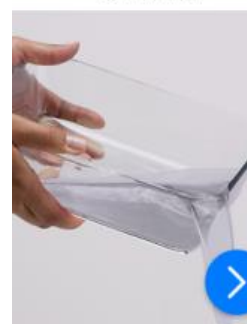


Empty the container and drip tray and then replace on the machine.



STEP 19

< Second Rinse

Almost there. Please select Start to begin the final rinse cycle.

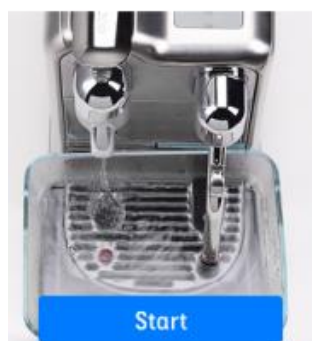

Press START to begin the final rinse.

STEP 20

< Second Rinse

Almost there. Please select Start to begin the final rinse cycle.



To stop at any time press PAUSE.

STEP 21

Empty


Lastly, remove and discard the contents of the container and the drip tray, then replace it onto the machine.



Empty the container and drip tray. Replace drip tray on the machine.

STEP 22

All done!

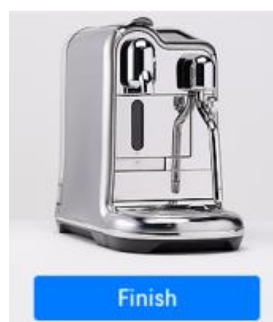

Rinse the water tank, fill to the MAX line with fresh water and replace on machine. Wipe down machine with a damp cloth. Let machine rest 10 minutes before using.