



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



ESSENZA MINI



Duration: 15-20 minutes

STEP 1



Turn the machine on by pressing any cup button and wait until the lights are steady.

STEP 2



Eject the capsule. Close the lever.

STEP 3




Empty the capsule container and drip tray and then reinsert. The cup support can be removed during the descaling process.

STEP 4



Place a receptacle under the coffee outlet.

STEP 5

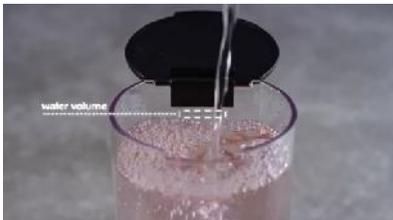

Fill the water tank with **1 packet** of descaling solution and the rest with water up to the max line.

STEP 6



Simultaneously press and hold both cup buttons for 5 seconds. The cup lights will blink quickly.

STEP 7



Press and release the large cup button to allow all of the solution to pass through the coffee outlet.

STEP 8



Refill the water tank with the used solution.

STEP 9



Empty the drip tray and reinsert.



STEP 10



Place the empty receptacle under the coffee outlet. Press and release the large cup button again to repeat the process.

STEP 11



Discard the solution, rinse the water tank thoroughly and refill the tank to the top with fresh water before placing back onto the machine.

STEP 12



Empty the drip tray and reinsert.

STEP 13



Place the empty receptacle under the coffee outlet. Press and release the large cup button and allow the entire tank of water to pass through the coffee outlet.

STEP 14



Repeat steps 11-13 two more times for additional rinsing as the water tank is small.

STEP 15



Simultaneously press and hold both cup buttons for 5 seconds to exit descaling mode. Blinking speed will slow down and then lights will become steady.

STEP 16



Discard the rinsing water. Empty and rinse the capsule container and drip tray, then reinsert.

STEP 17



Refill the water tank and place it on the machine. Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes before using.