



**NESPRESSO**<sup>®</sup>

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



*INISSIA*




Duration: 15-20 minutes

### STEP 1



Turn the machine on by pressing any cup button and wait until the lights are steady.

### STEP 2

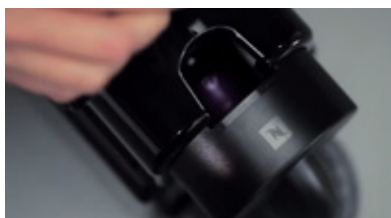

Eject the capsule. Close the lever.

### STEP 3



Empty the capsule container and drip tray and then reinsert.

### STEP 4



Place a receptacle under the coffee outlet.

### STEP 5



Fill the water tank halfway full with water and add **1 packet** of descaling solution.

### STEP 6



Simultaneously press and hold both cup buttons for 3 seconds. The cup lights will blink quickly.

### STEP 7



Press and release the large cup button to allow all of the solution to pass through the coffee outlet.

### STEP 8



Refill the water tank with the used solution.

### STEP 9



Empty the drip tray and reinsert.





## STEP 10



Place the empty receptacle under the coffee outlet. Press and release the large cup button again to repeat the process.

## STEP 11



Discard the solution, rinse the water tank thoroughly and refill the tank to the top with fresh water before placing back onto the machine.

## STEP 12



Empty the drip tray and reinsert.

## STEP 13




Place the empty receptacle under the coffee outlet. Press and release the large cup button and allow the entire tank of water to pass through the coffee outlet.

## STEP 14



Simultaneously press and hold both cup buttons for 3 seconds to exit descaling mode. Blinking speed will slow down and then lights will become steady.

## STEP 15

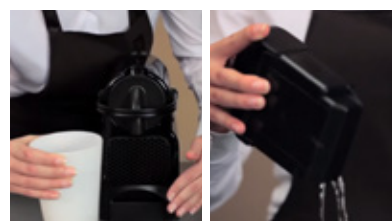

Discard the rinsing water. Empty and rinse the capsule container and drip tray then reinsert.

## STEP 16



Refill the water tank and place it onto the machine.

## STEP 17



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.