



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



NESPRESSO BY KITCHENAID



Duration: 15-20 minutes

STEP 1



Eject the capsule. Close the lever.

STEP 2



Empty the capsule container and drip tray and then reinsert.

STEP 3



Flip the cup shelf up and place a large receptacle under the coffee outlet.

STEP 4



Fill the water tank 2/3 with water and add **2 packets** of descaling solution.

STEP 5



Turn the machine on by pressing the N button. Wait for the light to become steady.

STEP 6



Enter the programming menu by rotating the selection dial until the light is on the left-most setting and hold the dial there until the light begins to flash.

STEP 7




Rotate the selection dial until the light is on the first right position.

STEP 8



Press and release the N button and the solution will begin to flow. The N light will blink. Once it stops blinking, discard the descaling solution.

STEP 9

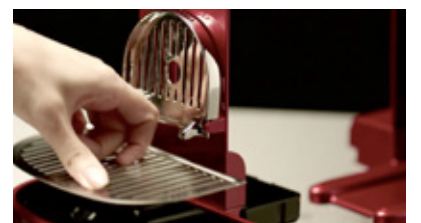

Empty and rinse the capsule container, drip grid and drip tray and reinsert.



STEP 10



Rinse the water tank thoroughly and refill the tank to the MAX line with fresh water before placing back onto the machine.

STEP 11



Place the empty receptacle back under the coffee outlet.

STEP 12



Press and release the N button and the rinsing water will begin to flow. The N button will resume blinking.

STEP 13



Once the machine is finished rinsing it automatically goes back to ready mode and all blinking stops.

STEP 14



Empty and rinse the capsule container, drip grid and drip tray and reinsert.

STEP 15



Rinse the water tank thoroughly and refill to the top with fresh water before placing back onto the machine.

STEP 16



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.