



**NESPRESSO**<sup>®</sup>

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



MAESTRIA





Duration: 30 minutes

STEP 1



With the machine off, set the Espresso dial to 4 and the Lungo dial to 1.

STEP 2



Lift the coffee lever to make sure there is no capsule inside the machine. Close the lever.

STEP 3



Remove the cup shelf by turning it to the vertical position and then pulling forward.

STEP 4



Empty the drip tray and capsule container and place them back onto the machine.

STEP 5



Enter descaling mode by pressing and holding the Espresso button while turning on the machine. The middle light will be orange.

STEP 6



Fill the water tank with **2 packets** of descaling solution and the rest with water.

STEP 7




Place sufficiently sized receptacles under the coffee and steam outlets.

STEP 8



Turn the steam lever toward the steam icon.

STEP 9

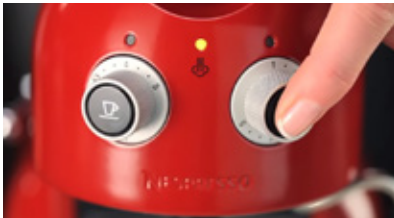

Press and release the Lungo button to start descaling. The middle light will blink.



## STEP 10



The water will flow alternately from the coffee and steam outlets. Do not interrupt the machine during descaling.

## STEP 11



When the middle light becomes steady, the cycle is complete.

## STEP 12



Discard the descaling solution.

## STEP 13



Empty and rinse the drip tray and capsule container and place them back onto the machine.

## STEP 14




Rinse the water tank, fill with fresh water and place it back onto the machine.

## STEP 15




Place the receptacles back under the coffee and steam outlets.

## STEP 16

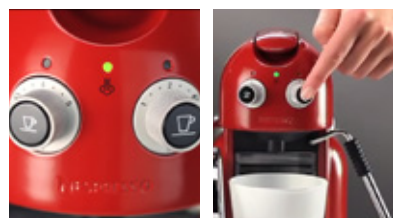

Turn the Lungo dial to position 2 and press and release the Lungo button to begin rinsing.

## STEP 17

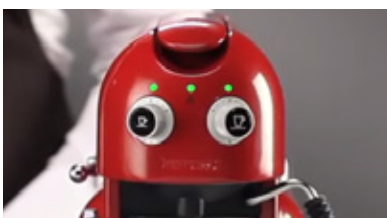

All the lights will blink while rinsing. When the lights are steady, the cycle is complete.

## STEP 18



Once complete, move the steam lever to OFF.



---

**STEP 19**

Discard the rinsing water.

---

**STEP 20**

Empty and rinse the water tank, drip tray and capsule container and place them back onto the machine.

---

**STEP 21**

Reinsert the cup shelf. Let the machine rest for 10 minutes. The machine is now ready to use.