



NESPRESSO®

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



VERTUO NEXT



Duration: 20 minutes

VERTUO NEXT •

STEP 1



With machine plugged in, empty the capsule container and drip tray and place back onto the machine.

STEP 2



Fill water tank with **1 packet** of *Nespresso* descaling solution and 17 ounces of water.

STEP 3



Make sure there is no capsule in the machine. Close machine head and lock the lever to the left to turn the machine on. Wait until the light is steady (approx. 30 seconds).

STEP 4



Unlock the lever with the head closed. Press and hold button until you see steady light turn off first, and then start blinking orange quickly. It may take approximately 7 seconds before light starts to blink.

STEP 5



Turn lever to the left to lock the lever, then turn lever back to the front to unlock the lever.

STEP 6



Press and hold the button until the light turns off and then starts blinking orange and quickly again (approx. 7 seconds). **Steps 5 and 6 must be completed within 45 seconds.**

STEP 7



Lock the lever. The light should still be blinking orange quickly. This is an indication that you have entered descaling mode. If not, start over from Step 3.

STEP 8



With a large container (min 34oz) underneath spout, press and release button once to begin descaling. Light will continuously blink throughout the process.

STEP 9



Once the solution has finished running through, machine should be silent. Discard the solution and return the empty container underneath the coffee spout.



STEP 10



Empty drip tray and capsule container. Rinse water tank and clean thoroughly. Refill the tank to the top with fresh water and place back on the machine.

STEP 11



Press and release the button to begin the rinsing phase. When machine stops making noise, discard the water from the container.

STEP 12



The machine will stop automatically and the cup button should become steady on its own.

STEP 13



Refill the water tank and place it back onto the machine.

STEP 14



Empty and rinse the capsule container and drip tray and reinsert.

STEP 15



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.