



**NESPRESSO**<sup>®</sup>

DESCALING  
GUIDE





# IMPORTANT INFORMATION BEFORE YOU BEGIN

*Nespresso* recommends descaling every 3 months or 300 capsules (whichever comes first).

---

*Nespresso* machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

---

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

---

Keep descaling solution out of reach of children.

---

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

---

Do not swallow or ingest the descaling solution.

---

The descaling solution may be irritating to the eyes and skin.

---

Avoid filling up the water tank during the descaling process.

---

After descaling, wipe down the machine with a damp cloth.

---



*LATTISSIMA PLUS*



Duration: 30 minutes

### STEP 1



When the Cappuccino button shines orange, it is time to descale.

### STEP 2



Turn machine on and eject the capsule. Close the lever.

### STEP 3



Empty the capsule container and drip tray and place back onto the machine.

### STEP 4



Fill the water tank halfway full with water and pour in **1 packet** of descaling solution.

### STEP 5



Remove the descaling pipe from its storage door and push it onto the steam connector. The Cappuccino button will begin to blink orange.

### STEP 6




Place a large receptacle under the coffee outlet and descaling pipe. Press and release the Cappuccino button.

### STEP 7




The Cappuccino and Latte Macchiato buttons will blink and solution will flow out of the coffee outlet and descaling pipe alternately.

### STEP 8

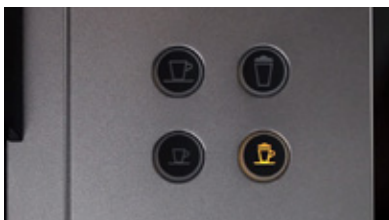

Once the tank is empty the Cappuccino button will blink orange alone.


### STEP 9

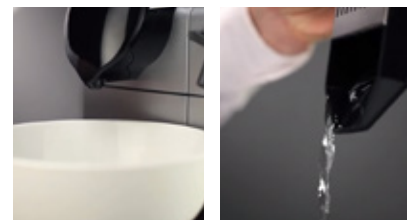

Discard the solution. Empty the drip tray and place back onto the machine.



## STEP 10

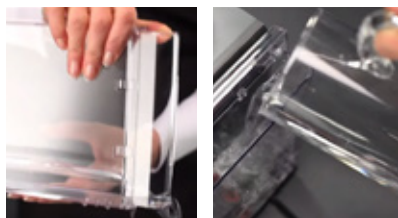

Rinse the water tank thoroughly and refill the tank to the top with fresh water and place on machine.

## STEP 11



Put the large receptacle back under the coffee outlet and descaling pipe. Press and release the Cappuccino button.

## STEP 12



The Cappuccino and Latte Macchiato buttons will blink and the rinsing water will flow out of the coffee outlet and descaling pipe alternately.

## STEP 13



The machine automatically shuts off when the rinsing is finished. Remove and store the descaling pipe after rinsing it thoroughly.

## STEP 14



Refill the water tank and place it back onto the machine.

## STEP 15



Empty and rinse the capsule container and drip tray and reinsert.

## STEP 16



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.